 


How To... **Install Desktop Memory**

Replacing memory is a quick and easy way to enhance your machine's productivity. It's also easy to do, with no need for complicated tools or technical knowledge. Follow the simple steps outlined below and you'll find your machine running faster and more efficiently.

 
1. Turn off the power to your system, and on the back of the unit where applicable
2. Use an anti-static wrist or foot strap and connect it to the chassis, before touching any of the circuit boards.
3. Open the case and locate the memory slots, removing present memory if upgrading.
4. Note how the memory is installed and how many slots there are, before removing the memory to be replaced.
5. Refer to manufacturer's specific model instructions for configuration options*.
6. Note the location of the 'notch' in the memory module and ensure that the new module is installed in the same way. Slot types differ with the technology (see our Memory Guide for more information on these).
7. Insert the memory module(s) and push into place, exerting equal force on either end. The memory module is secured when the white tabs click into place. Be careful not to touch the gold contact points at any time.
8. Put case back together and enjoy a machine that's running faster!

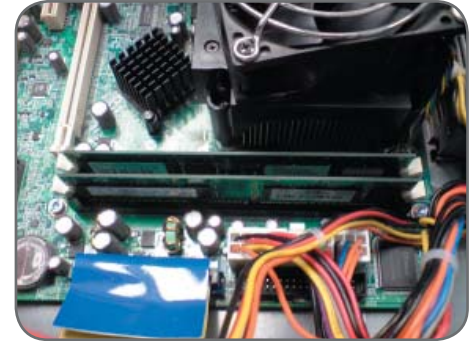


Locate the memory



Remove memory modules

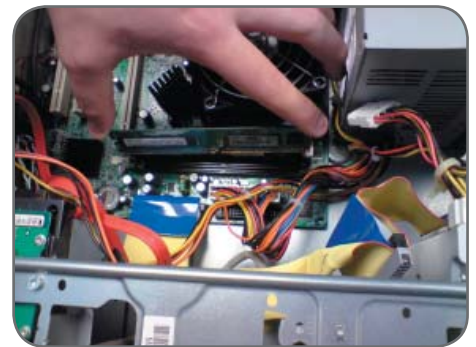

Insert modules

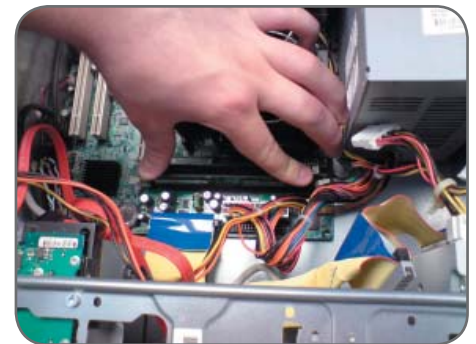 

Press down firmly until clips snap into place

With a failure rate as low as ours, we're confident your Hypertec memory will cause you no problems. However if you need advice, assistance, or are experiencing problems, simply contact the Hypertec Technical Support team on 0870 243 5603, between 8.30am - 6pm, Monday-Friday.

*Some manufacturers specify loading memory modules in specific order for maximum performance.

These guidelines are a generic guide; for more specific instructions refer to the manufacturers' manual for the machine. Hypertec will not be held liable for any damage occurring to property or person, when following these instructions.

Please contact us for more information:

Hypertec Ltd

t: 0870 243 5603

w: www.hypertec.co.uk